



FACTORY MAINTENANCE QUICKSTART GUIDE

SERVICE A / 0

- Replace engine oil and filter
- Perform 4-point safety check
- Check all fluid levels
- Adjust tire pressure
- Wash and vacuum



*Your services will alternate -
First comes an "A" Service,
then a "B" Service, then
back to an "A" and keep
alternating...*

SERVICE B / 9

- Replace engine oil and filter
- Service front and rear brakes
- Check parking brake adjustments
- Rotate tires, inspect for wear and adjust pressure
- Inspect tie rod ends, steering gear box and boots
- Inspect suspension components
- Inspect driveshaft boots
- Inspect brake hoses and lines (including ABS)
- Check all fluid levels and condition of fluids
- Inspect exhaust system
- Inspect fuel lines and connections
- Perform 4-point safety check
- Wash and vacuum

SUB-ITEMS

Sub-Item #1

Every 8 - 12K

- Rotate tires, inspect for wear and adjust pressure

Sub-Item #2

Every 40 - 49K

- Replace air clear element
- Replace dust and pollen filter
- Inspect and adjust drive belt

Sub-Item #3

Every 40 - 60K

- Replace automatic transmission fluid
- Replace transfer case fluid (4WD Trucks)

Sub-Item #4

V6: Every 168K or 7 years

V4: Every 176K or 7 years

- Replace spark plugs
- Replace timing belt
- Inspect water pump (V6 only)
- Inspect valve clearance
- Inspect brake hoses and lines (including ABS/VSA)
- Check all fluid levels and conditions of fluids
- Inspect exhaust system
- Inspect fuel lines and connections

Sub-Item #5

First at 10 years, and then every 5 years

- Replace engine coolant

Sub-Item #6

First 12K, then 24K, and then every 24k

- Replace rear differential fluid (4WD/AWD Trucks, S2000)

Sub-Item #7

Every 3 years

- Replace brake fluid



HONDA
GENUINE PARTS & SERVICE

Destination
BURNABY HONDA